



## Phoenix v3.0 Activation Instructions

### Step 1) Connect Keypad

- Use the **BLACK LaGard/LP Keypad Testing Cable** to connect the included keypad to the jack on top of the Phoenix

### Step 2) Connect Power

- Connect A/C Power Supply or 'AA' Battery Pack to the power jack located on the bottom of the Phoenix. Slide Battery Pack power switch to ON position.

### Step 3) Get Product Key

- Press '0' on keypad when prompted.
- "Activation Code Required" displayed
- Product Key (12 digit alphanumeric) displayed with prompt for 10-digit activation code.
- To receive your activation code visit:

[www.taylortechtools.com/activate](http://www.taylortechtools.com/activate)

- The activation page will also give the option to register to receive software updates and allow for downloading 3.0 instructions

```
Activation Code  
Required
```

```
key:02AA41010247  
Code: _____
```

### Step 4) Enter Activation Code

- Enter 10-digit Activation Code
- Confirm: 1] Yes or 2] No
- Activation Code will be confirmed and Phoenix will restart

```
Confirm 1=Y 2=N  
Code: 0103175399
```

```
** CONFIRMED! **
```

### Step 5) Set PIN Code

- Screen will prompt you to choose a 4 digit pin code of your choice.
  - Note: This can be changed later in the *Settings Menu*
- Screen confirms Login PIN Set:
- Phoenix v3.0 is now ready!

```
Choose Login PIN  
_____
```

```
LOGIN PIN SET!  
1234
```

Support Number (859) 363-5978

Email: [sales@taylortechtools.com](mailto:sales@taylortechtools.com)

Website: [taylortechtools.com](http://taylortechtools.com)

